


Caution :

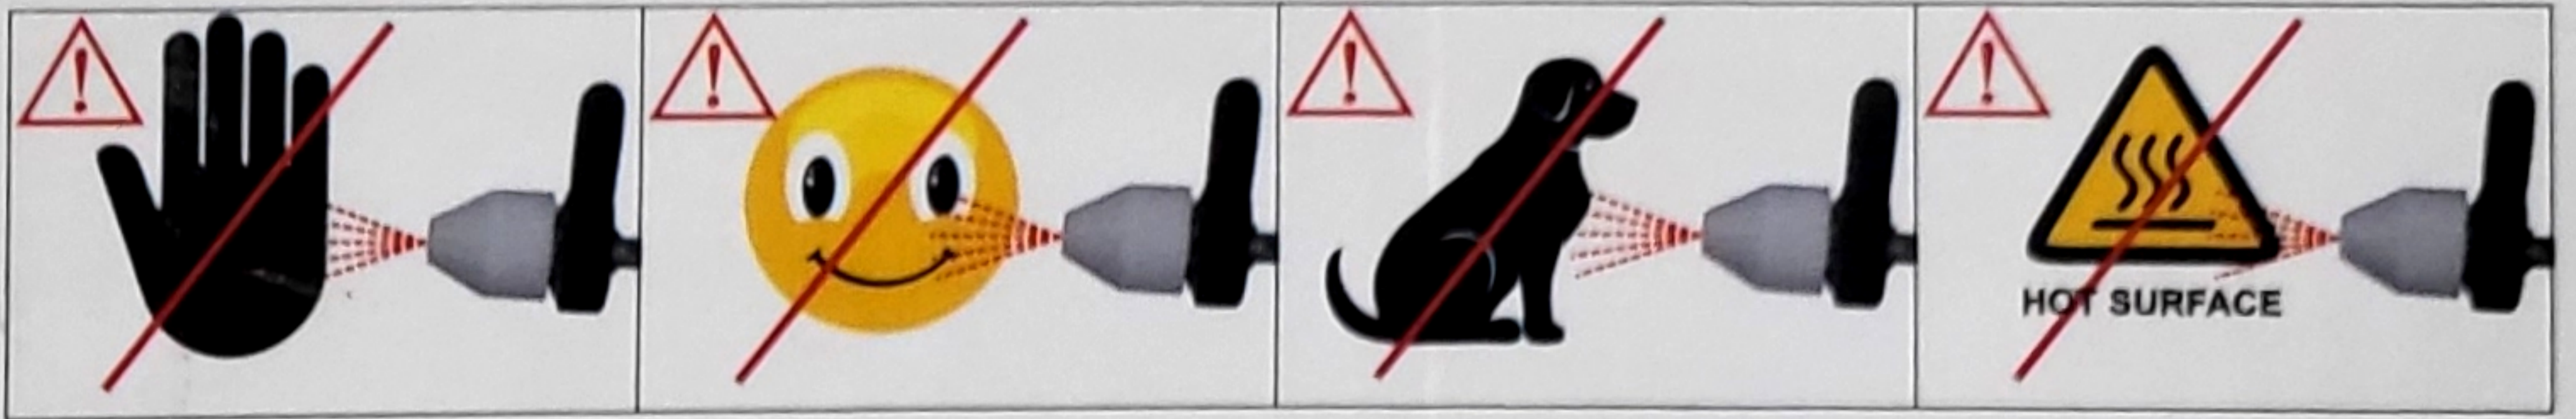

- ★ High Pressure : Do not spray on human body / hand / face / animals.
- ★ Never aim sprayer at your skin or eyes. This can cause serious injury.
- ★ Do not use with flammable fluids.
- ★ Do not use with water or water based solutions.
- ★ Never use spray gun without adequate ventilation. Always use on a vacuum exhaust system to remove solvent vapors.
- ★ Wear goggles and gloves when using this spray gun.
- ★ Utilize additional personal protective equipment (PPE) that is recommended based on the cleaning solvent being used.
- ★ Do not allow children to operate this device. Keep out of reach of children.
- ★ Do not spray onto fire / hot surfaces / electrical outlets.
- ★ Device should be used only for its intended purpose for stain cleaning.
- ★ Do not immerse in water to operate nor place it in an area where it may get wet.
- ★ Do not reach for a unit that has fallen into water. Unplug immediately if it has been dropped into water or any other liquid or solvent.
- ★ Do not use the appliance with wet hands.
- ★ Do not damage, modify, unreasonably bend, pull or twist the cord.
- ★ Do not place anything heavy on the cord and do not pinch the cord.
- ★ Do not let dirt get attached to the end of the appliance plug. Doing so may result in fire, electric shock, short circuit, burns or scalding.
- ★ Do not drop or insert any object into the jar, other than the intended solvent.
- ★ It is important, not to be distracted while using this device.
- ★ Always ensure the appliance is operated on an electric power source matched to the rated voltage indicated on the appliance. Ensure that the power source and appliance plug both are plugged in correctly.

Important :

Always switch off and unplug the appliance immediately after using it.

DO NOT RUN WATERBASED OR FLAMMABLE FLUIDS THROUGH THIS GUN. DOING SO WILL VOID WARRANTY.

The Expert SP-1000 is designed for intermittent use, with a recommended usage of 15 seconds ON and 15 seconds OFF, otherwise heating may occur. It should not be sprayed constantly, else it may cause damage to the spray gun.